



**MX7B Cold Cathode Ionization Gauge
Instruction Manual
Rev E**



© 2022 Televac[®] - The Fredericks Company
2400 Philmont Avenue
Huntingdon Valley, PA 19006
web: www.frederickscompany.com
email: sales@frederickscompany.com
tel: +1 215 947 2500
fax: +1 215 947 7464

Table of Contents

- 1. Introduction 3**
 - 1.1 Disclaimer 3
 - 1.2 Description 3
 - 1.3 Specifications..... 3
 - 1.4 Dimensions 4
- 2. Safety Information 5**
 - 2.1 General Safety Information 5
- 3. Quick Start Guide 6**
 - 3.1 Check what you’ve received 6
 - 3.2 Safety Instructions 6
 - 3.3 Connect Power 6
 - 3.4 Check the Measurement Screen 6
 - 3.5 Power down the MX7B..... 6
- 4. Set Up 7**
 - 4.1 Installation 7
 - 4.2 Electrical Information 7
 - 4.3 Turning the High Voltage On and Off 7
- 5. Menu Navigation 8**
 - 5.1 Description 8
 - 5.2 Menu Structure 9
- 6. Explanation of Menu Items and Navigation 10**
 - 6.1 Measurement 10
 - 6.2 High Voltage Toggle 10
 - 6.3 System Settings 10
 - 6.4 Calibration 12
 - 6.5 Set Points 13
 - 6.6 Output 13
- 7. Analog Output 14**
 - 7.1 Description 14
 - 7.2 Linear 14
 - 7.3 Linear by Decade 14
 - 7.4 Logarithmic 15
- 8. Cleaning the MX7B Sensor..... 16**
 - 8.1 Cleaning Instructions 16
- 9. RS-485 and USB Communications 17**
 - 9.1 Description 17
 - 9.2 Changing Communications Settings 17
 - 9.3 Communications Specifications..... 17
 - 9.4 RS-485 and USB Command List 18
 - 9.5 RS-485 Command Examples 22
 - 9.6 USB Sample Commands 22
 - 9.7 RS-485 and USB Communications Error Codes 23
 - 9.8 Firmware Updates 23

1. Introduction

1.1 Disclaimer

- 1.1.1 All information in this manual is subject to change without notice. The Fredericks Company assumes no responsibility for inaccuracies in product specifications or any liability arising from product use. Please contact Televac® at sales@frederickscompany.com or call +1 215 947 2500 with comments or questions.


1.2 Description

- 1.2.1 The MX7B is cold cathode ionization gauge with a measurement range of 1×10^{-8} Torr to 1×10^{-3} Torr. It utilizes a Televac® cold cathode ionization sensor in the Penning configuration with part numbers 2-2171-KF25 (KF25 flange version) or 2-2171-NPT (3/4 NPT version). It has a two-color OLED display with selectable units of Torr, Millibar, and Kilopascal. Settings can be changed through RS-485 communications with a PC, through USB communications with a PC, or through the unit's front panel using four capacitive touch buttons located on the top of the unit. The MX7B has 2 set points, one relay and one open collector, and a selectable analog output option. The analog output is a configurable 0-10 V output that includes options for linear, linear-by-decade, and logarithmic formats.

1.3 Specifications

| | |
|--|---|
| Operating Range | 1*10 ⁻⁸ to 1*10 ⁻³ Torr |
| Communications | RS-485 and USB |
| Programmable Set Points | 2 |
| Set Point 1 | Open Collector |
| Set Point 2 | Relay |
| Analog Output | Configurable 0 to 10 V DC |
| Supply Voltage | +22 to +26 V DC |
| Maximum Power | 8 W |
| Calibration Medium | Dry air or nitrogen |
| Overpressure | 150 PSI |
| Digital Output Resolution | 2 significant digits with exponent |
| Analog Output Resolution | 16 bits |
| Operating Temperature | 0 °C to 50 °C |
| Storage Temperature | -20 °C to 60 °C |
| Bakeout Temperature | 100° C (electronics removed) |
| Response Time | ≤ 1 second |
| Accuracy | |
| 1*10⁻⁹ to 1*10⁻³ Torr | ±30% |
| Analog Output | ± 10 mV |
| Display Readable Distance | 3 m (10 feet) |

1.4 Dimensions

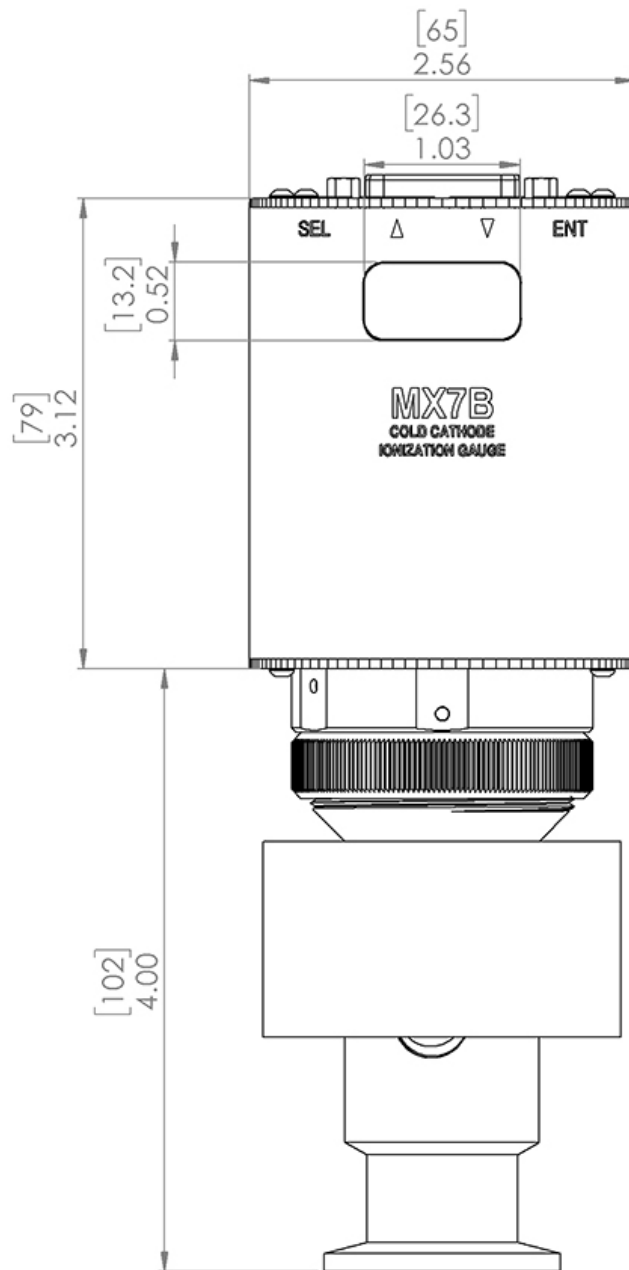

2. Safety Information

2.1 General Safety Information

- 2.1.1 In these instructions the word “product” refers to the MX7B and all of its approved parts and accessories. NOTE: These instructions do not and cannot provide for every contingency that may arise in connection with the installation, operation, or maintenance of this product. Should you require further assistance, please contact Televac® at the email address found in the footer of this manual.
- 2.1.2 This product has been designed and tested to offer reasonably safe service provided in it is installed, operated and serviced in strict accordance with these safety instructions.
- 2.1.3 These safety precautions must be observed during all phases of operation, installation, and service of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Televac® disclaims all liability for the customer’s failure to comply with these requirements.
 - 2.1.3.1 **READ** Instructions – Read all safety and operating instructions before operating the product.
 - 2.1.3.2 **RETAIN** instructions – Retain the safety and operating instructions for future reference.
 - 2.1.3.3 **HEED** warnings – Adhere to all warnings on the product and in the operating instructions.
 - 2.1.3.4 **FOLLOW** instructions – Follow all operating and maintenance instructions.
 - 2.1.3.5 **ACCESSORIES** – Do not use accessories not recommended in this manual as they may require a technician to restore the product to its normal operation.
- 2.1.4 The MX7B has voltages up to 3000 volts. As such, it represents a shock hazard and should be handled with caution. Any disassembly of the gauge should be carried out by a trained professional and with the power disconnected.
- 2.1.5 Do not substitute parts or modify instrument. Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modifications to the product. Return the product to Televac® for service and repair to ensure that safety features are maintained. Do not use this product if it has unauthorized modifications.

3. Quick Start Guide

3.1 Check what you've received

- 3.1.1 Compare what you've received to your purchase order.

3.2 Safety Instructions

- 3.2.1 Review all safety instructions outlined in Section 2.

3.3 Connect Power

- 3.3.1 Connect a 24V power supply to the unit. See the pin out in Section 4.2 for more information.

3.4 Check the Measurement Screen

- 3.4.1 The unit should power up and display "OFF" on the measurement screen. Do not attempt to turn on the high voltage.

3.5 Power down the MX7B

- 3.5.1 Power down the MX7B, and install it on a vacuum stand for use.

4. Set Up


4.1 Installation

- 4.1.1 Each MX7B is designed to be used in conjunction with a 7B sensor. The 7B sensor can be mounted in any position however it is recommended to mount it away from any contaminants that might be in the system as over time this can affect the measurement accuracy. Mounting the 7B sensor close to the area where vacuum measurement is desired is preferred to increase the accuracy. Each 7B sensor has a key that only allows for the MX7B to mate with the sensor in the proper orientation. Rotate the MX7B until the correct alignment is obtained and the MX7B is able to slide onto the 7B sensor. Connect the power connector to the top of the unit and be sure to tighten the screws so that a firm connection is maintained.
- 4.1.2 Try to avoid connecting the MX7B to the vacuum chamber by long or narrow piping as this may affect the accuracy and response time of the unit. Avoid mounting the unit near a heater within the chamber as this may affect the measurement accuracy. Excessive vibration of the unit may affect accuracy and decrease the life of the unit. Exposure to oils and other contaminants will decrease the accuracy and decrease the life of the sensor. Do not expose the unit to corrosive gases.

4.2 Electrical Information

- 4.2.1 Power connectors and adapters for use with the MX7B are available for purchase from Televac®. Operators wishing to create their own adapters should refer to the pin out of the MX7B below. Each connection labeled “Floating” has no connection and should remain so.

| Pin | Description |
|-----|-------------------------|
| 1 | Analog Output (Ground) |
| 2 | RS-485 A(-) |
| 3 | SP2 NC |
| 4 | SP2 NO |
| 5 | SP1 Open Drain |
| 6 | Starter Output (5V) |
| 7 | Starter Output (Ground) |
| 8 | Supply Voltage |
| 9 | Analog Output (0-10 V) |
| 10 | RS-485 B(+) |
| 11 | SP2 Com |
| 12 | SP1 Source |
| 13 | Sensor Voltage Control |
| 14 | Sensor Voltage Control |
| 15 | Supply Voltage (Ground) |

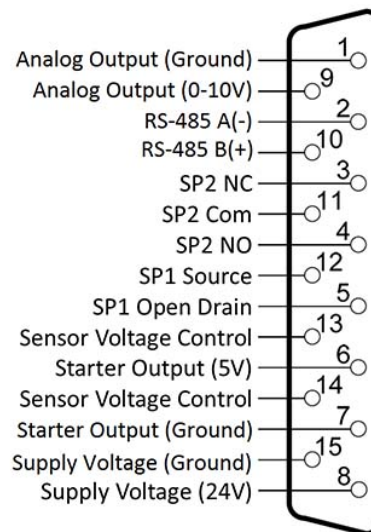

4.3 Turning the High Voltage On and Off

- 4.3.1 The MX7B has an operating range that does not include measurement above 1×10^{-3} Torr. If the unit is operated above 1×10^{-3} Torr, the sensor will be damaged and electrical arcing inside the sensor may occur. To prevent this, the unit should be paired with a low vacuum gauge, such as the MX4A or MX2A, to ensure safe operation.
- 4.3.2 The MX7B provides two control methods for toggling the high voltage; Menu Control and Pin Control. To select which method is used, navigate to the Vsense Control menu screen and select either Menu or Pins. Pin Control is provided through pins 13 and 14 of the MX7B connector.

- 4.3.3 To turn on the sensor when Menu Control is selected, use one of the following two options: from the Measurement Screen, press SEL to navigate to the Vsense Control, then press ENT to unlock the control, press UP to toggle the status to ON, and then press ENT to save the change. The high voltage should now turn on. In Menu Control mode, the high voltage can also be toggled by sending the appropriate command to turn on the sensor through RS-485 or USB Communications. To turn off the sensor in Menu Control mode, navigate to the Vsense Control screen, press ENT to unlock the menu, press UP to toggle the status to OFF, and press ENT to save the change. Alternatively, when in Menu Control mode, the user may send the appropriate command to turn off the sensor through RS-485 or USB Communications.
- 4.3.4 To turn on the sensor when Hardware Control is selected, short pins 13 and 14 together. To turn off the sensor, open the path between pins 13 and 14. This functionality is included to easily interface with a low vacuum gauge, such as the Televac® MX2A or MX4A, to automatically control the unit via an open collector or relay. For more information see Application Note [AN 3023](#).
- 4.3.5 To protect the sensor from damage, if the sensor high voltage is toggled on when in either Menu Control or Pin Control mode the pressure is above $1 \cdot 10^{-3}$ Torr, overcurrent protection will turn the sensor off. If the sensor is in Menu Control mode, then a command to turn on the sensor will need to be sent via communication or through the front panel to toggle the high voltage on again. If Pin Control is enabled, then the unit will attempt every to turn the high voltage on every 60 seconds until overcurrent protection does not occur.

5. Menu Navigation

5.1 Description

- 5.1.1 The MX7B contains many operator customizable features. Changing these features is possible through the menu or via RS-485 or USB communications. To navigate the menu simply use the buttons found on top of the MX7B. The four buttons include the SEL button, an UP arrow, a DOWN arrow, and an ENT button. Using the SEL button allows the operator to change between menu categories. Using the ENT button allows the user to enable value editing and save values in addition to toggling between options where appropriate. Using the UP and DOWN arrows allows navigation through menu options. The UP and DOWN arrow buttons are also used to edit values.

5.2 Menu Structure

- 5.2.1 Measurement
- 5.2.2 High Voltage Toggle
- 5.2.3 System Settings
 - 5.2.3.1 Units
 - 5.2.3.1.1 Torr
 - 5.2.3.1.2 mbar
 - 5.2.3.1.3 kPa
 - 5.2.3.2 Gas Type
 - 5.2.3.2.1 Hydrogen
 - 5.2.3.2.2 Helium
 - 5.2.3.2.3 Neon
 - 5.2.3.2.4 Argon
 - 5.2.3.2.5 Krypton
 - 5.2.3.2.6 Carbon Dioxide
 - 5.2.3.3 Resolution
 - 5.2.3.3.1 Low Resolution
 - 5.2.3.3.2 High Resolution
 - 5.2.3.4 Vsense Control
 - 5.2.3.4.1 Menu Control
 - 5.2.3.4.2 Pin Control
 - 5.2.3.5 Diagnostics
 - 5.2.3.5.1 FW Date
 - 5.2.3.5.2 FW Version
- 5.2.4 Calibration
 - 5.2.4.1 1×10^{-6} Torr
 - 5.2.4.2 1×10^{-5} Torr
 - 5.2.4.3 1×10^{-4} Torr
 - 5.2.4.4 1×10^{-3} Torr
 - 5.2.4.5 Analog Output Adjustment
- 5.2.5 Set Points
 - 5.2.5.1 SP1 Off
 - 5.2.5.2 SP1 On
 - 5.2.5.3 SP2 Off
 - 5.2.5.4 SP2 On
- 5.2.6 Output
 - 5.2.6.1 Linear
 - 5.2.6.1.1 10 V Pressure
 - 5.2.6.1.2 0 V Pressure (Non-settable)
 - 5.2.6.2 Linear by Decade
 - 5.2.6.3 Logarithmic
 - 5.2.6.3.1 10 V Pressure
 - 5.2.6.3.2 0 V Pressure
 - 5.2.6.4 RS-485 Output
 - 5.2.6.4.1 Address
 - 5.2.6.4.2 Baud Rate

6. Explanation of Menu Items and Navigation

6.1 Measurement

- 6.1.1 The measurement screen contains the reading of the sensor in easy-to-read blue digits and includes units. In addition to the digital reading, the yellow bar on the measurement screen provides an analog indication of the pressure based on a logarithmic scale. At 1×10^{-3} Torr the yellow bar should stretch across the width of the screen. At 1×10^{-8} Torr the yellow bar will disappear, and at 5×10^{-5} Torr, the yellow bar will be approximately half way across the screen.
- 6.1.2 The sensor high voltage must be turned on to display a reading. If the high voltage is not on, the measurement screen will display "OFF". When the high voltage is toggled on, the unit will display "Starting" until the unit has reached a steady measurement. Once a steady measurement is obtained, it will be displayed. If the unit goes into overcurrent protection mode, the display will read "Over". If Pin Control is enabled, the unit will attempt to start every 60 seconds. If overcurrent protection mode continues upon an attempted start, the unit will continue to read "Over". If Menu Control is enabled, the unit will display "OFF" and the high voltage will need to be turned on again. See Section 4.3 for more details. If the high voltage is enabled and the pressure is below 1×10^{-8} Torr, then the unit will display "Low" to indicate that the pressure is below the measurable limit.

6.2 High Voltage Toggle

- 6.2.1 If the unit is in Menu Control Mode, then the user must turn on the high voltage by sending a command over communications or by navigating to the High Voltage Toggle menu screen. Once at the High Voltage Toggle screen, press ENT to unlock the screen, press UP or DOWN to change the setting, and then press ENT to save the change. The high voltage will then turn on and a pressure indication will be displayed on the Measurement Screen. If the pressure is too high, the unit will go into overcurrent protection mode and the high voltage will turn off. To restart the unit once a safe pressure has been achieved at the gauge, simply repeat the steps to turn on the high voltage

6.3 System Settings

- 6.3.1 The system settings menu contains the ability to change the measurement units, apply a gas correction factor, change the digital resolution to display an extra digit, and set the Vsense Control method for the unit. There is also a diagnostic screen for use by Televac® service representatives to troubleshoot the unit.
 - 6.3.1.1 To modify the system settings
 - 6.3.1.2 Navigate to the measurement screen.
 - 6.3.1.3 Press SEL twice.
 - 6.3.1.4 Press UP and DOWN arrows to navigate between panes under the system settings heading.
 - 6.3.1.5 Press ENT to unlock the specific screen. ADJ will appear at the top of screen to show that the unit is unlocked and that a change can be made.
 - 6.3.1.6 Press UP or DOWN to select between the options available.
 - 6.3.1.7 Press ENT to save the changes or SEL to navigate away without saving. ADJ will disappear from the screen after either ENT or SEL has been pressed.
- 6.3.2 **Units**
 - 6.3.2.1 The MX7B has three selectable units to choose from: Torr, mbar, and kPa. When changing units, all of the relevant settings previously saved in the unit will be converted to the appropriate units.

6.3.3 Gas Type

6.3.3.1 The MX7B is an indirect pressure sensor and its accuracy will be affected by the presence of gases other than nitrogen. The MX7B has the ability to apply correction factors for six pre-defined gases: hydrogen, helium, neon, argon, krypton, and carbon dioxide. These correction factors have been experimentally determined by Televac® to yield the maximum accuracy available. Conversion factors for use with the MX7B when gases to be measured are other than Nitrogen are listed. For users wishing to manually apply the conversion, multiply the unit reading by the factor in the table below to convert to the correct pressure reading.

| Gas Type | Conversion Factor |
|----------------|-------------------|
| Nitrogen | 1.00 |
| Hydrogen | 3.00 |
| Helium | 8.90 |
| Neon | 4.30 |
| Argon | 0.84 |
| Krypton | 0.59 |
| Carbon Dioxide | 0.69 |

6.3.4 Resolution

6.3.4.1 The MX7B displays two significant digits by default (low resolution). The user may choose to operate the gauge in high resolution mode in which the unit will display three significant digits.

6.3.5 High Voltage Control

6.3.5.1 The MX7B has an upper range of 1×10^{-3} Torr and will be damaged by use above this pressure. Toggling of the unit on and off can be accomplished via software, through the menu or via communications, or hardware means, via two pins on the DB-15 connector. For more information on the difference between hardware and software control, see Section 4.3.

6.3.6 Diagnostics

The MX7B contains a diagnostic screen for use by Televac® service representatives to troubleshoot the unit. The Diagnostic screen contains the FW version of the unit and the date the software was last revised.

6.4 Calibration

- 6.4.1 To ensure that the unit always displays with the most accuracy, the MX7B includes a number of operator-configurable calibration points. While the MX7B is factory calibrated, the use of the included calibration points may become necessary after extended use, contamination, etc. If accuracy is critical, it is recommended to return the sensor to Televac® for NIST-traceable calibration.
- 6.4.2 The unit should only be calibrated when under vacuum and a NIST-traceable calibrate reference is available. Any change of calibration values by the customer voids any Televac® calibration and should only be used in when in line with a defined quality system.
- 6.4.3 To modify the calibration settings:
- 6.4.3.1 Navigate to the measurement screen.
 - 6.4.3.2 Press SEL three times.
 - 6.4.3.3 Press the UP and DOWN arrows to navigate between panes under the calibration heading.
 - 6.4.3.4 Press ENT to select the calibration point.
 - 6.4.3.5 Press UP or DOWN until the unit matches the reference in use for calibration.
 - 6.4.3.6 Press ENT to save the adjustment. Press SEL to exit without saving.
 - 6.4.3.7 Note 1: Calibration should be performed in the following order: 1×10^{-6} Torr adjustment, 1×10^{-5} Torr adjustment, 1×10^{-4} Torr adjustment, 1×10^{-3} Torr adjustment. Failing to calibrate -in this order will result in inaccuracies.
 - 6.4.3.8 Note 2: Changing calibration settings voids NIST-Traceable calibrations!
- 6.4.4 **10^{-6} Torr**
- 6.4.4.1 The 1×10^{-6} calibration point allows the gauge to adjust the pressure reading at 1×10^{-6} Torr. This calibration point should not be used to adjust the gauge reading below a reference pressure of 5×10^{-7} Torr or above 5×10^{-6} Torr.
- 6.4.5 **10^{-5} Torr**
- 6.4.5.1 The 1×10^{-5} calibration point allows the gauge to adjust the pressure reading at 1×10^{-5} Torr. This calibration point should not be used to adjust the gauge reading below a reference pressure of 5×10^{-6} Torr or above 5×10^{-5} Torr.
- 6.4.6 **10^{-4} Torr**
- 6.4.6.1 The 1×10^{-4} calibration point allows the gauge to adjust the pressure reading at 1×10^{-4} Torr. This calibration point should not be used to adjust the gauge reading below a reference pressure of 5×10^{-5} Torr or above 5×10^{-4} Torr.
- 6.4.7 **10^{-3} Torr**
- 6.4.7.1 The 1×10^{-3} calibration point allows the gauge to adjust the pressure reading at 1×10^{-3} Torr. This calibration point should not be used to adjust the gauge reading below a reference pressure of 5×10^{-4} Torr or above 1×10^{-3} Torr.
- 6.4.8 **Analog Output Adjustment**
- 6.4.8.1 The MX7B allows for an offset calibration of the MX7B to provide maximum accuracy for users where long cable lengths are affecting the accuracy. To calibrate the analog output, adjust the pressure of the vacuum system to a stable pressure corresponding to the value near the maximum analog output. Measure the analog output with a volt meter, compare the displayed pressure on the gauge to the calculated pressure based on the analog output, and adjust the calibration until the displayed pressure and calculated pressure match. See section 7.

6.5 Set Points

- 6.5.1 The MX7B contains two set points for the convenience of the operator. Set point 1 is an N-Channel 60 V MOSFET open collector. It has a maximum current rating of 1 A. The data sheet can be found at www.vishay.com/docs/69958/si2308bds.pdf. Set point 2 is a relay with a maximum switching voltage of 220 V DC (250 V AC) and a maximum switching current of 2 A. The data sheet can be found at www.te.com/catalog/pn/en/1393788-3.
- 6.5.2 To modify the set point settings
 - 6.5.2.1 Navigate to the measurement screen.
 - 6.5.2.2 Press SEL four times.
 - 6.5.2.3 The set point screen contains set point 1 off.
 - 6.5.2.4 To access set point 1 on, set point 2 off, or set point 2 on, press DOWN from the initial set point screen.
 - 6.5.2.5 When the correct set point is selected, press ENT to unlock the set point adjustment screen.
 - 6.5.2.6 Press UP and DOWN to change the value.
 - 6.5.2.7 When the desired reading is reached, press ENT to save the change or SEL to navigate away without saving the change.

6.6 Output

- 6.6.1 The MX7B provides a user selectable analog output as well as RS-485 and USB digital outputs.
- 6.6.2 To modify the output settings:
 - 6.6.2.1 Navigate to the measurement screen.
 - 6.6.2.2 Press SEL five times.
 - 6.6.2.3 Press UP and DOWN to navigate between the analog output and RS-485 screens.
 - 6.6.2.4 When the desired field is present, press ENT to enter the heading.
 - 6.6.2.5 To change the desired setting, press ENT to unlock the setting.
 - 6.6.2.6 Press UP or DOWN to adjust the setting.
 - 6.6.2.7 Press ENT to save the setting or SEL to navigate away without saving.
- 6.6.3 Analog Output
 - 6.6.3.1 The types of analog output are listed below. For more information on the types of output, please see Section 7.
 - 6.6.3.1.1 Linear
 - 6.6.3.1.1.1 10 V
 - 6.6.3.1.1.2 0V (non-settable)
 - 6.6.3.1.2 Linear by Decade
 - 6.6.3.1.3 Logarithmic
 - 6.6.3.1.3.1 10 V
 - 6.6.3.1.3.2 0 V
- 6.6.4 RS-485 Output
 - 6.6.4.1 The RS-485 settable fields are listed below. Please see the Section 9 for more details and a complete list of commands. Listed below are the fields within the RS-485 Output screen.
 - 6.6.4.1.1 Address
 - 6.6.4.1.2 Baud Rate

7. Analog Output

7.1 Description

- 7.1.1 The MX7B provides the option for outputting the pressure reading in an analog form. Operators who wish to use PLCs to monitor processes should find this function useful. There are three different analog output formats to choose between. The formats include Logarithmic, Linear by Decade, and Linear.

7.2 Linear

- 7.2.1 The Linear output covers a select range of the MX7B with a linear scale. The 10 Volt or full-scale value of the output can be selected from the following values: 1×10^{-5} Torr, 1×10^{-4} Torr, or 1×10^{-3} Torr. The scale extends three decades below the full-scale value. Three decades below the 10 V value is the 0 V value. This corresponds to the low end of the range and output below the 0 V value is not available. For a wider range use a different analog output format. Note that only the 10 V exponent is selectable. When navigating through the menu, the 0 V exponent will be viewable but not settable. Use the high value (1.0×10^H) exponent H in the following equation to convert the voltage output to pressure:

$$\text{Voltage Output} \times 10^{H-1} = \text{Pressure}$$

- 7.2.2 To select the Linear output, navigate to the Analog Output screen, press ENT, and then use the UP or DOWN arrow to select Linear. Press ENT to save the change. Then press DOWN once to navigate to the Output High screen. Press ENT to unlock the screen and press UP or DOWN to select the full-scale pressure for the analog output.

7.3 Linear by Decade

- 7.3.1 The Linear by Decade output spans the entire range of the MX7B. It uses the units digit of the voltage reading to communicate the decade of the pressure reading and the units after the decimal to communicate the specific pressure using the very generalized expression below, where A, B, C, and D are digits ranging from 0-9:

$$\text{Voltage} = A.BCD \rightarrow \text{Pressure(Torr)} = 10^{A-11} * .BCD$$

- 7.3.2 For example, a voltage reading of 8.367 Volts corresponds to a pressure of 3.67×10^{-4} Torr.

$$10^{8-11} * .367 = 10^{-3} * .367 * 10^{-4} \text{ Torr}$$

- 7.3.3 To select the Linear by Decade output, navigate to the Analog Output screen, press ENT, and then use the UP or DOWN arrow to select Linear by Decade. Press ENT to save the change.

7.4 Logarithmic

- 7.4.1 The Logarithmic output is an accurate output that can cover the entire range of the 7B or be used with a selected range. To use this output, the user must select an exponent that corresponds to 10 V and the exponent that corresponds to 0 V. The exponent chosen for this format uses the formula below to convert the output voltage into a pressure measurement. Note that H is the exponent of the 10 V value and L is the exponent of the 0 V value. Volt is the analog output voltage.

$$Span = \frac{10}{H - L}$$

$$Offset = 0 - L$$

$$Pressure(Torr) = 10^{\left(\frac{Volt}{Span} - offset\right)}$$


- 7.4.2 For example, with the logarithmic range set to a 0 V value of $1 \cdot 10^{-7}$ and a 10 V value of $1 \cdot 10^{-3}$ and a voltage reading of 3.075 Volts, the pressure corresponds to:

$$Span = \frac{10}{-3 - (-7)} = 2.5$$

$$Offset = 0 - (-7) = 7$$

$$Pressure(Torr) = 10^{\frac{3.075}{2.5} - 7} = 1.7 \cdot 10^{-6} Torr$$

- 7.4.3 To select the Logarithmic output, navigate to the Analog Output screen, press ENT, and then use the UP or DOWN arrow to select Logarithmic option. Press ENT to save the change. Press the DOWN arrow to navigate to the 10 V exponent selection screen. Press ENT to unlock and then the UP or DOWN arrow to select the value. Press ENT to save the value. Press the DOWN arrow to navigate to the 0 V exponent selection screen. Press ENT to unlock the screen and the UP or DOWN arrow to select the 0 V value.

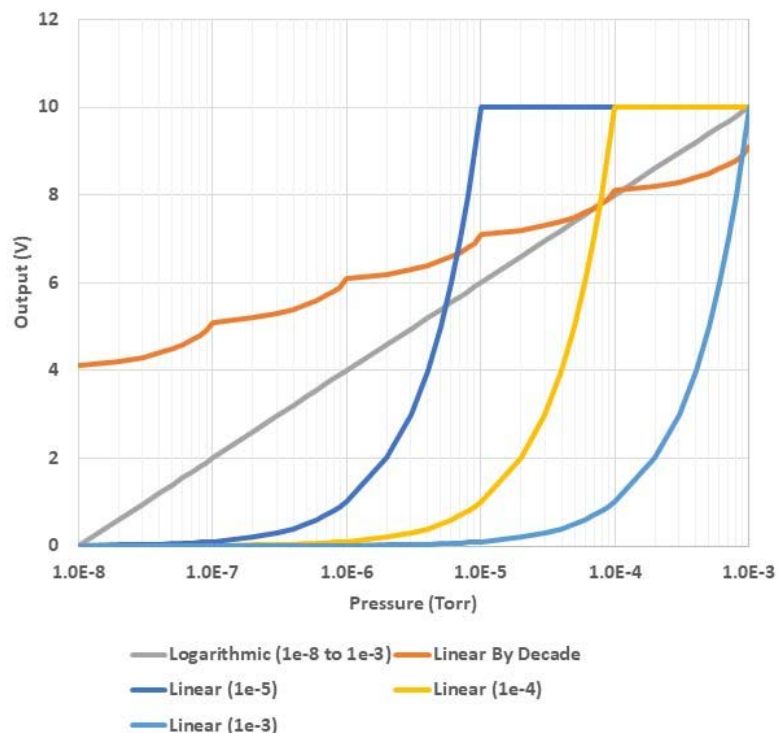


8. Cleaning the MX7B Sensor

8.1 Cleaning Instructions

- 8.1.1 Remove the cap by unscrewing it (labeled with gray in the diagram).
- 8.1.2 Pull the anode assembly out of the body (labeled with red in the diagram).
- 8.1.3 Remove the "O" ring from the body of the sensor, taking care not to scratch the "O" ring seat (labeled with orange in the diagram).
- 8.1.4 Wipe off the "O" ring with a lint free wipe.
- 8.1.5 Visually inspect the "O" ring for cracks or tears, it should also be round and not flattened. If any physical defects are found, the "O" ring should be replaced.
- 8.1.6 Blast the vacuum wetted portions of the anode assembly at 30 PSI using 70 to 140 mesh glass beads (labeled with red and blue in the diagram). Be careful not to damage the glass feedthrough at the base of the assembly (labeled with green in the diagram). If a rainbow effect is noticed on the glass feedthrough, a crack may exist and the anode assembly should be replaced. See below for relevant part numbers.
- 8.1.7 Blast the vacuum wetted portions of the body with glass beads (labeled with blue in the diagram), concentrating on the pole pieces and "O" ring areas, but making sure to clean all surfaces wetted to vacuum. If the threaded end of the tube needs to be cleaned, it can be bead blasted as well.
- 8.1.8 After cleaning, use compressed dry air to remove any residual glass beads or dust from the sensor.
- 8.1.9 Ensure that there are no loose metal particles around the pole pieces.
- 8.1.10 Grease the "O" ring with Apiezon L or M Grease (a vacuum approved grease). The "O" ring should be shiny, be sure not to apply excess grease.
- 8.1.11 Install the "O" ring in the body.
- 8.1.12 Install the anode assembly in the body; observe the keyway location.
- 8.1.13 Replace the cap and hand tighten it.
- 8.1.14 Reinstall the sensor on the vacuum chamber.
- 8.1.15 Allow several hours for the sensor to degas when your system is pumped down to high vacuum.
- 8.1.16 If properly cleaned and assembled, the sensor is ready for use without re-calibration unless NIST traceable calibration is required.

| Description | Part Number |
|---------------------|-------------|
| MX7B anode assembly | 2-7900-707 |

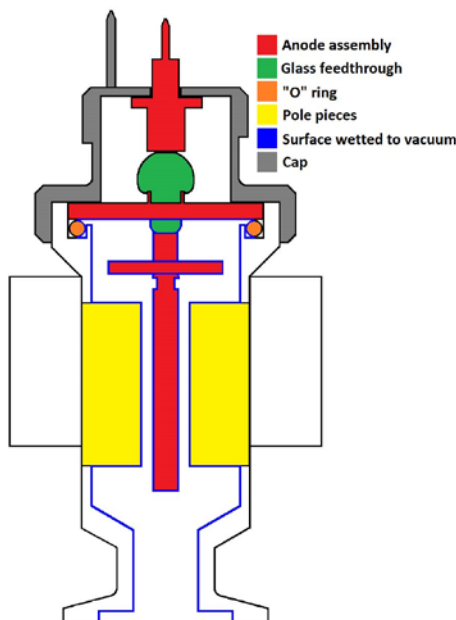

9. RS-485 and USB Communications

9.1 Description

- 9.1.1 This gauge communicates with the host computer through an RS-485 or USB interface. Each communication correspondence consists of a command line sent by the host computer and a response from the gauge.
- 9.1.2 To communicate with the MX7B via RS-485, the user must have an RS-485 capable device to send commands to the MX7B. Each command must be preceded by a *, the address, and will be an S, R, W, RC, or WC.
- 9.1.3 To communicate with the MX7B via USB, the user must have a USB capable device to send commands to the MX7B. Each command must be preceded by a * and will be an S, R, W, RC, or WC. Because USB is a serial bus, the unit address is omitted from commands. See the Communications Specifications heading for information on what settings are necessary to properly communicate with the MX7B.

9.2 Changing Communications Settings

- 9.2.1 The communication parameters, (baud rate, address, etc.), are changed through the local menu. Please see Section 6 in this manual entitled Explanation of Menu Items and Navigation for more information on navigating and editing within the menu. Below are provided some specifics on the RS-485 and USB Communications of the MX7B.

9.3 Communications Specifications

- 9.3.1 RS-485 Communications Specifications

| | |
|-----------------------------|---|
| Interface | RS-485 compatible |
| Data Transfer Method | Synchronous/half duplicate method |
| Baud Rate | 9600/19200/38400/57600/115200 |
| Data Format | 1 start bit, 8 data bits, 0 parity bits, 1 stop bit |
| Error Detection | Parity bit |
| Parity Bit | None |
| Stop Bit | 1 |
| Transfer Distance | Max 100 meters |

- 9.3.2 USB Communications Specifications

| | |
|--------------------------|---|
| Interface | USB type B receptacle on module |
| Type | USB 2.0 |
| Class | USB communications device class (USB CDC) |
| Baud Rate | 115200 |
| Transfer Distance | Max 5 meters |

9.4 RS-485 and USB Command List

9.4.1 RS-485 and USB Status Commands

| Command | Response | Description |
|-----------|----------|---|
| S1 | ppsee | Read pressure data where ppsee is: pp = mantissa s = sign ee = exponent |
| S2 | yymmdd | Read firmware version, where: yy = last two digits of year mm = month dd = day |

9.4.2 RS-485 and USB General Read Commands

| Command | Response | Description |
|------------|------------|---|
| R1 | xx | Read units, where xx is: PA = Pa TR = Torr MB = mbar |
| R3 | xx | Read resolution, where xx is: LO = low HI = high |
| R5 | xyzzabb | Read analog output range, where: x = 1 (linear), 2 (log), 3 (linear-by-decade) y = high value exponent sign zz = high value exponent a = low value exponent sign bb = low value exponent |
| R6 | xx | Read gas type, where xx is: N2 = Nitrogen H2 = Hydrogen NE = Neon C2 = Carbon Dioxide AR = Argon HE = Helium KR = Krypton |
| R7Y | ppseePPSEE | Read SPL (ppsee) and SP2H (PPSEE) settings: Y = 1 (Open Collector) Y = 2 (Relay) |
| R8 | x | Read sensor voltage control, where x is: 1 = menu control 2 = pin control |
| R10 | x | Read high voltage state, where x is: 0 = off 1 = on |

9.4.3 RS-485 and USB General Write Commands

| Command | Response | Description |
|--------------------|------------|---|
| W1xx | xx | Set units, where xx is: PA = Pa TR = Torr MB = mbar |
| W3 | xx | Toggle resolution, where xx is: LO = low HI = high |
| W51yzz | 1yzz | Set analog output format to linear: yzz = high value y = high value exponent sign zz = high value exponent |
| W52yzzabb | 2yzzabb | Set analog output format to logarithmic: yzz = high value abb = low value y = high value exponent sign zz = high value exponent a = low value exponent sign bb = low value exponent |
| W53 | 3 | Set analog output format to linear-by-decade |
| W6xx | xx | Set gas type, where xx is: N2 = Nitrogen AR = Argon H2 = Hydrogen HE = Helium NE = Neon KR = Krypton C2 = Carbon Dioxide Response is new gas type. |
| W7YppsePPSE | ppseePPSEE | Set thresholds for set point Y, where: ppsee = SPL PPSEE = SPH Response is new threshold settings for SPL (ppsee) and SPH (PPSEE). Y = 1 (Open Collector) Y = 2 (Relay) |
| W8x | x | Set sensor voltage control, where x is: 1 = menu control 2 = pin control |
| W10x | x | Set high voltage state, where x is: 0 = off 1 = on Response is new high voltage setting. |

9.4.4 RS-485 and USB Set Point Commands

| Command | Response | Description |
|--------------------|------------|---|
| W1xx | xx | Set units, where xx is: PA = Pa TR = Torr MB = mbar |
| W3 | xx | Toggle resolution, where xx is: LO = low HI = high |
| W51yzz | 1yzz | Set analog output format to linear: yzz = high value y = high value exponent sign zz = high value exponent |
| W52yzzabb | 2yzzabb | Set analog output format to logarithmic: yzz = high value abb = low value y = high value exponent sign zz = high value exponent a = low value exponent sign bb = low value exponent |
| W53 | 3 | Set analog output format to linear-by-decade |
| W6xx | xx | Set gas type, where xx is: N2 = Nitrogen AR = Argon H2 = Hydrogen HE = Helium NE = Neon KR = Krypton C2 = Carbon Dioxide Response is new gas type. |
| W7YppsePPSE | ppseePPSEE | Set thresholds for set point Y, where: ppsee = SPL PPSEE = SPH Response is new threshold settings for SPL (ppsee) and SPH (PPSEE). Y = 1 (Open Collector) Y = 2 (Relay) |
| W8x | x | Set sensor voltage control, where x is: 1 = menu control 2 = pin control |
| W10x | x | Set high voltage state, where x is: 0 = off 1 = on Response is new high voltage setting. |

9.4.5 RS-485 and USB Set Point Commands

| Command | Response | Description |
|---------------|----------|--|
| RC1 | xyy | Read 1E-6 calibration adjustment where x is: 0=negative 1=positive yy can be 00 to 99 |
| RC2 | xyy | Read 1E-5 calibration adjustment |
| RC3 | xyy | Read 1E-4 calibration adjustment |
| RC4 | xyy | Read 1E-3 calibration adjustment |
| RC5 | 3 | Set analog output format to linear-by-decade |
| WC1xyy | ppsee | Set 1E-6 calibration adjustment, response is new pressure reading. |
| WC2xyy | ppsee | Set 1E-5 calibration adjustment, response is new pressure reading. |
| WC3xyy | ppsee | Set 1E-4 calibration adjustment, response is new pressure reading. |
| WC4xyy | ppsee | Set 1E-3 calibration adjustment, response is new pressure reading. |
| WC5xyy | ppsee | Write analog output adjustment. Return value is pressure reading. |

9.4.6 USB Commands for Setting RS-485 Communications Settings

| Command | Response | Description |
|---------------|----------|--|
| C1 | xxxx | Return serial baud rate, where xxxx is: 0096 = 9600 0192 = 19200 0384 = 38400 0576 = 57600 1152 = 115200 Return new value before changing. |
| C1xxxx | xxxx | Set serial baud rate, where xxxx is: 0096 = 9600 0192 = 19200 0384 = 38400 0576 = 57600 1152 = 115200 Return new value before changing. |
| C2 | x | Read RS-485 address, where x is 0 to F |
| C2xx | x | Set RS-485 address, where x is 0 to F Return new value before changing |

9.5 RS-485 Command Examples

| Command | Output | Description |
|---------------|------------|--|
| *OR1<CR> | 0001 | Units are in Pa |
| | 0002 | Units in Torr |
| | 0003 | Units in mbar |
| *OR2<CR> | ppseePPSEE | Lower set point 1 given by ppsee Upper set point 1 given by PPSEE |
| *OR3<CR> | ppseePPSEE | Set point 2 ON given by ppsee Set point 2 OFF given by PPSEE |
| *OW10001<CR> | 0001 | Units are in kPa |
| *OW10002<CR> | 0002 | Units are in Torr |
| *OW10003<CR> | 0003 | Units are in mbar |
| *OW4xx<CR> | GG | Change gas type: N2=Nitrogen/Air, AR=Argon |
| *OS1<CR> | PPSEE | Pressure reading is PPSEE |
| *ORC1<CR> | Baaa | Read 1E-6 Torr Adjustment |
| *ORC2<CR> | Baaa | Read 1E-5 Torr Adjustment |
| *ORC3<CR> | Baaa | Read 1E-4 Torr Adjustment |
| *ORC4<CR> | Baaa | Read 1E-3 Torr Adjustment |
| *OWC1Baaa<CR> | PPSEE | 1E-6 Torr Adjustment is Baaa, reading is PPSEE |
| *OWC2Baaa<CR> | PPSEE | 1E-5 Torr Adjustment is Baaa, reading is PPSEE |
| *OWC3Baaa<CR> | PPSEE | 1E-4 Torr Adjustment is Baaa, reading is PPSEE |
| *OWC4Baaa<CR> | PPSEE | 1E-3 Torr Adjustment is Baaa, reading is PPSEE |

9.6 USB Sample Commands

- 9.6.1 Note that all USB commands are the same as the RS-485 commands with the star and address prefix omitted.

| Command | Output | Description |
|-------------|------------|--|
| R1<CR> | 0001 | Units are in Pa |
| | 0002 | Units in Torr |
| | 0003 | Units in mbar |
| R2<CR> | ppseePPSEE | Lower set point 1 given by ppsee Upper set point 1 given by PPSEE |
| R3<CR> | ppseePPSEE | Set point 2 ON given by ppsee Set point 2 OFF given by PPSEE |
| W10001<CR> | 0001 | Units are in kPa |
| W10002<CR> | 0002 | Units are in Torr |
| W10003<CR> | 0003 | Units are in mbar |
| W4xx<CR> | GG | Change gas type: N2=Nitrogen/Air, AR=Argon |
| S1<CR> | PPSEE | Pressure reading is PPSEE |
| RC1<CR> | Baaa | Read 1E-6 Torr Adjustment |
| RC2<CR> | Baaa | Read 1E-5 Torr Adjustment |
| RC3<CR> | Baaa | Read 1E-4 Torr Adjustment |
| RC4<CR> | Baaa | Read 1E-3 Torr Adjustment |
| WC1Baaa<CR> | PPSEE | 1E-6 Torr Adjustment is Baaa, reading is PPSEE |
| WC2Baaa<CR> | PPSEE | 1E-5 Torr Adjustment is Baaa, reading is PPSEE |
| WC3Baaa<CR> | PPSEE | 1E-4 Torr Adjustment is Baaa, reading is PPSEE |
| WC4Baaa<CR> | PPSEE | 1E-3 Torr Adjustment is Baaa, reading is PPSEE |

9.7 RS-485 and USB Communications Error Codes

| Error Code | Description |
|----------------|--|
| 0N0001<cr><lf> | Command error: an invalid character was sent for the command or an invalid number after the character. |
| 0N0002<cr><lf> | Units error: an invalid parameter was sent after a command specifier |

9.8 Firmware Updates

- 9.8.1 The MX7B has the ability to update the firmware when in the field over the USB communications. For more information on updating the firmware, please contact sales@frederickscompany.com.